

surcare

SMF-V4

SANDER & MICROFINISHER



USER MANUAL

**SAFETY INSTRUCTIONS
and SPECIFICATIONS**

Before you start operating your Surcare SMF-V4 Machine be sure to read this User's Manual on the Safe and Proper use.

CONTENTS

| | |
|----------------|--------------------------------------|
| Page 2 | Contents |
| Page 3 | Important Information |
| Page 5 | SMF-V4 Parts |
| Page 6 | SMF-V4 Specifications |
| Page 8 | Using your SMF-V4 |
| Page 10 | Quick Grit Change System |
| Page 11 | Directional Methods |
| Page 12 | Operational Safety Procedures |

IMPORTANT

- Please note this machine has been designed to finish **horizontal surfaces only**.
- This machine works on a counterweight moving from one side to the other in all directions.
- When using this SMF-V4 machine it is important that the surface you are about to finish is secure. **Please ensure area that supports your work surface are level and stable.**
- If your supporting work surface is not secure then this puts great strain on the bearing. Failure to secure surfaces being finished will significantly reduce the life of your main bearing.

BEFORE STARTING THE SMF-V4 MACHINE

1. Ensure the surface to be sanded/micro-finished is firmly secure.
2. The SMF-V4 Machine is in a central position so that the machine is not hanging over the edge of the working surface.
3. Vacuum is attached to vacuum port
As well as removing debris, the vacuum system also assists in keeping the work surface cool (See Page 7).
4. Hold the handle of the SMF-V4 Machine firmly and switch the machine on.

PLEASE NOTE:

Ensure power switch is OFF before removing SMF-V4 Machine from the work surface.

Do not lift the SMF-V4 Machine off from the work surface until the machine has come to a complete standstill.

This machine has moving parts that wear.

Parts such as Bearings, Worn Cords & Sockets should be regularly checked and replaced as needed.

These checks should be done routinely as they are a matter of safety, obtaining the maximum performance, and prolonging the life of the SMF-V4.



SURCARE SMF-V4 MACHINE



ON/OFF Switch



Extension Handle Port

Vacuum Port



Extension Handle

Insert T-Bar end of Extension Handle into Port
(Figure 1)

Once inserted firmly, pull down (Figure 2)

DO NOT pick up SMF-V4 by the Extention Handle, this is for handling the machine while in motion. Picking up by the handle could result in injury and Machine falling from work surface.



Figure 1



Figure 2

SURCARE SMF-V4 SPECIFICATIONS

| | |
|---------------------------|-------------------------------------|
| VOLTAGE: | 240v |
| HEIGHT: | 320mm (12.75 ") |
| HORSEPOWER: | 0.375kw (1/2 HP) |
| DISC SIZE: | 4 x 125mm (5" - 13" Overall) |
| REVS PER MINUTE: | 2800 |
| ORBIT STROKE SIZE: | 6mm (1/4 ") |
| WEIGHT: | 12 KGS |
| CENTRAL VAC READY | |

This SMF-V4 Machine has been designed for sanding and micro-finishing and will give a consistent surface finish.

The SMF-V4 may be used on almost any horizontal surface, providing the appropriate abrasive discs are used for the particular surface to be sanded or micro-finished. The type of material being sanded and the finish required will determine which abrasive to be used on the surface.

Be sure to have the appropriate abrasive discs attached and align pads in the correct manner. Please discuss the abrasive requirements needed to sand and micro-finish your particular surface with your supplier.

If you have any other surface queries contact

SURCARE AUSTRALIA.

36 Enterprise Avenue, Berwick VIC 3806

Phone: +61 3 9796 1894

Email: surcare@surcare.com

Be sure to check all sanding accessories are properly adhered to the surface they were designed to adhere to. When releasing discs from velcro mounts be careful not to pull on the velcro mounts as this will cause dust to enter between the foam pad and the mounts and deteriorate contact.

For gloss finishes on solid surfaces you will need to use a micro-finishing process.

The SMF-V4 has been designed with a very efficient dust extraction system. This dust extraction system enables material that has been removed by the SMF-V4 from the surface being worked to be collected safely and disposed of appropriately. The vacuum system also assists in keeping the work surface cool.

Vacuum system attachment for dust extraction should preferably be 1000 watts or more and the vacuum hose must have an inside diameter no less than the outside diameter of the vacuum port (approx 38mm - 40mm) (1" 9/16).

USER MANUAL

PLEASE READ *BEFORE* STARTING YOUR SMF-V4 MACHINE

Remove the SMF-V4 from its box and stand in an upright position.

Check to see that there has been no damage to the SMF-V4 in transit.

If there is damage to the SMF-V4, contact supplier for replacement. **Do not use SMF-V4 machine that is damaged in any way.**

Roll machine over onto its side. **(FIGURE 1)**

Do not roll machine onto its front or back. The SMF-V4 is designed to rest on the side butterfly handles as shown in **Figure 1**.

Make sure the Accessory Pad is securely attached to the backing plate. Apply the required grade grit to the Accessory Pad.



FIG 1

IMPORTANT

Do not store SMF-V4 machine resting on accessory pads.

Store the SMF-V4 on its side or remove accessory pads from SMF-V4 when not in use or transporting.

Do not use SMF-V4 without vacuum.

The SMF-V4 is fitted with a very effective dust extraction design which also assists in keeping the work surface cool. However, the vacuum machine used must also be efficient. Vacuum system attachment for dust extraction should be 1000 watts or more for best results.

Starting the SMF-V4 is shown here in (FIGURE 2)

Holding the SMF-V4 securely with one hand, release the lock on the start/stop switch button (turning switch as directed by arrows located on the switch), positioned on the side of control box.

When machine has started, the left hand can then hold the vacuum hose and power cord (FIGURE 3).

FIG 2



FIG 3



One hand should be positioned on side handle or Quick Release Handle (the vacuum hose and power cord can be cable tied to extension handle, or held away from work surface) whilst the other hand is free to hold edge of fan cowl or turn machine OFF when work has been completed (FIGURE 3)

Do not run machine holding both butterfly handles – only use the Extension Handle Provided.

These are for lifting the machine and will not control the machine.

QUICK GRIT CHANGE SYSTEM

The Surcare SMF-V4 has a Quick Grit Change System (patent pending), which allows the operator to change 4 abrasive pads simultaneously. This can be achieved in one of two ways:

1. Removing the 4 abrasive discs from the pad and replacing with another 4 discs of a different grade grit onto the same clover shaped disc pad.
2. Removing the clover shaped disc pad that contains the 4 abrasive discs and replacing it with another clover shaped disc pad with the 4 abrasive discs of a different grade grit.

The Surcare V4 is abrasive friendly and can take a variety of brands of abrasive discs, which can be purchased through your local supplier.

The Quick Grit Change System operates on a Hook and Loop System. If the user requires abrasives that do not operate on a Hook and Loop System, interface pads can be utilised between the pad and the abrasive disc. Interface pads can be purchased from abrasive suppliers.

Figure 1 shows the SMF-V4 resting on its side, ready for the clover shaped accessory pad to be removed and replaced with another. Note that the machine rests on the rubber handle grip and the rubber grommets around the fan cowl. Resting the SMF-V4 on its side in this way protects the capacitor box and start and stop switches.

Figures 2 and 3 show removing the clover shaped accessory pad from the mounting plate.


Figure 4 shows the mounting pad with accessory pad completely removed.

Figure 5 shows replacing one accessory pad with another.

NOTE: All surcare machines feature Quick Grit Change System, however diagrams portray Surcare SMF-V4 Machine. Principle of the Quick Grit Change System is same for all machines.



DIRECTIONAL METHOD DIAGRAM

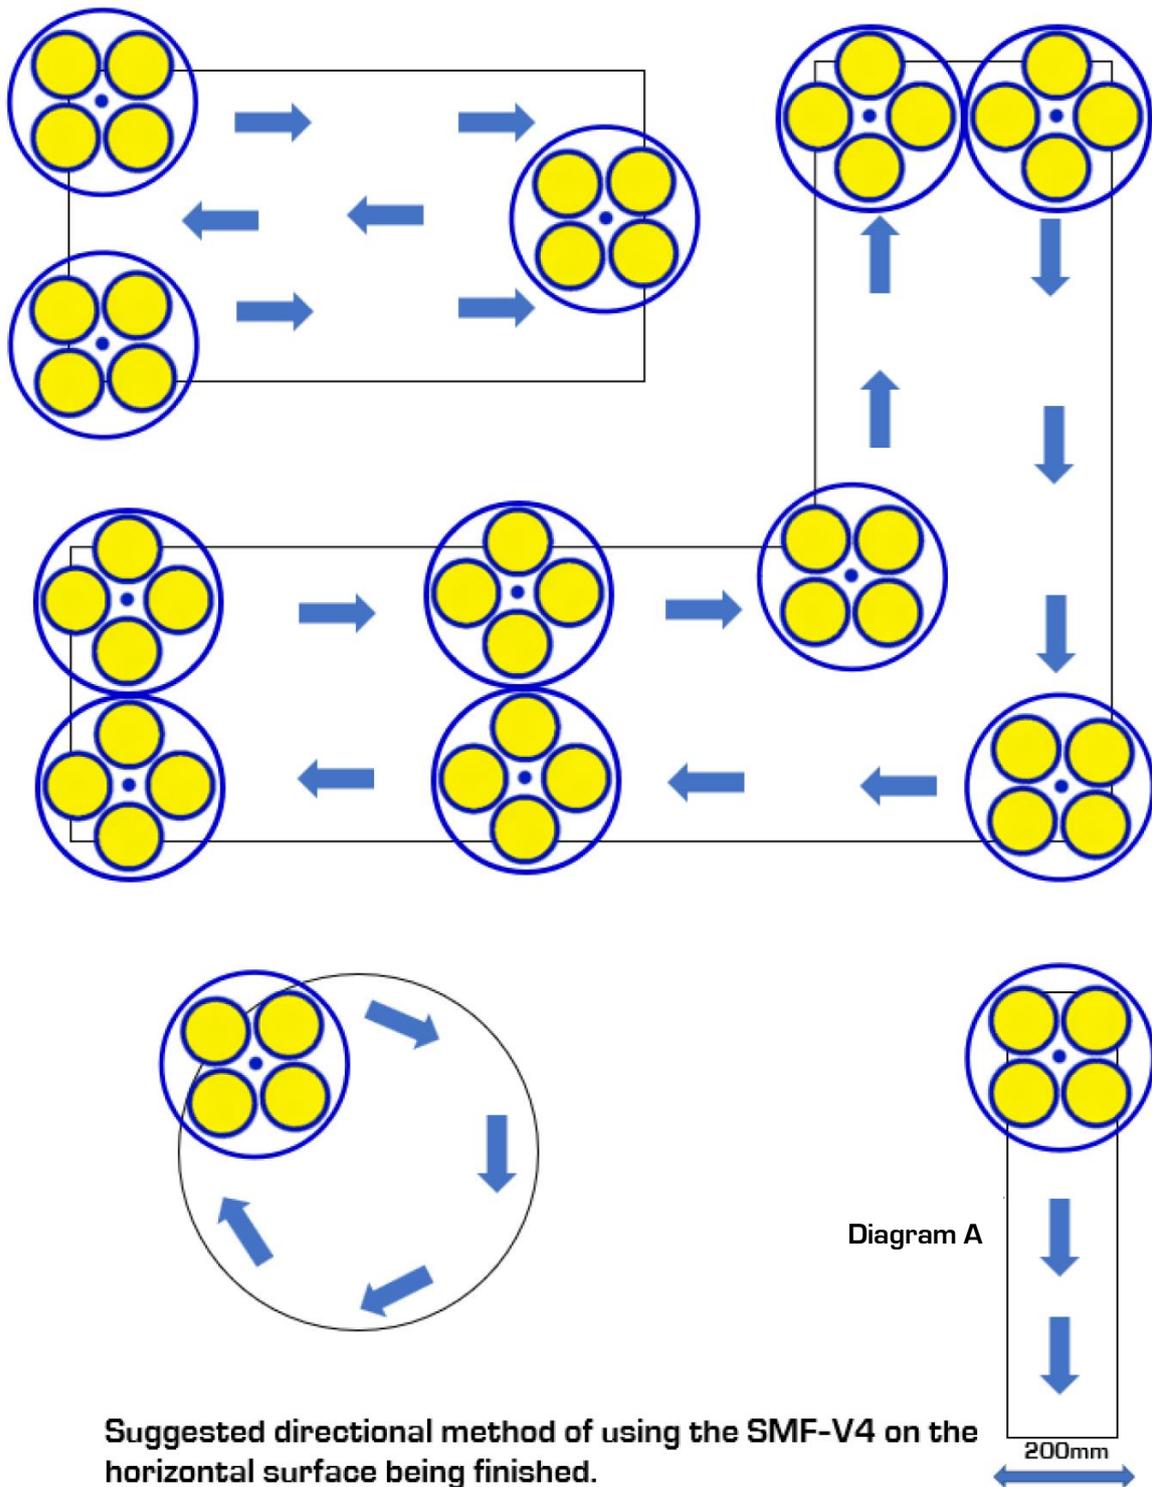

Suggested directional method of using the SMF-V4 on the horizontal surface being finished.

Please note suggested minimum width of surface material (Diagram A)


OPERATIONAL SAFETY PROCEDURES

- 1. Keep operational area clean and free of unnecessary clutter.**
- 2. Be sure the work environment around you is well-lit and free from materials that are combustible, such as paint thinners, lacquer thinners, adhesive solvents, petrol fumes, gas, and other materials which are or may be combustible. This is an electrical unit and like any other electrical power tool may produce electrical sparks when ON/OFF switch is used, and during operation. These sparks have the potential to ignite flammable agents which could cause injury to operator, others around the operator and the immediate surroundings.**
- 3. Prevent electric shock by ensuring no body contact with grounded surfaces.**
- 4. Never use machine in damp or wet conditions, and do not expose machine to moisture.**
- 5. Keep out of reach of children.**
- 6. Wear appropriate attire. Loose clothing, long hair or jewellery may get caught in the machine causing bodily injury.**
- 7. Wear appropriate safety gear, such as eye, ear and respiratory protection.**
- 8. Provide adequate ventilation and dust extraction.**
- 9. Before turning on your machine make sure the surface you are about to sand and/or finish is clear of anything that could cause a bodily injury or damage the underparts of the machine. (For example - protruding nails and/or screws and/or splinters of material are able to cause both bodily injury and machine damage).**

- 10. The surface to be finished should be flat, firmly secure and ready for sanding.**
- 11. Never mistreat the electrical cord by exposing it to heat, sharp edges, oil, corrosive material, or any other potential hazard likely to damage the electrical insulations and so render it unsafe.**
- 12. Never yank the electrical plug from the electrical power outlet nor try to carry the machine by the electrical cord.**
- 13. Don't move the machine to another location without ensuring that the switch is in the OFF position. Make sure switch is OFF before plugging into electrical outlet.**
- 14. When machine is used outdoors, use only extension cords intended for use outdoors and so marked.**
- 15. Maintain machine with care. Keep machine in good condition and clean for better performance and longer life. Inspect machine periodically and if damaged have it repaired by an authorised service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean and free from oil and grease.**
- 16. Store machine sensibly. When machine not in use store in a dry secure place out of reach of children.**
- 17. Don't use machine for purpose not intended, use only for applications specified in the handling instructions.**
- 18. Use the machine at the rate applicable for the job. This way you will achieve a safer and better finish and a longer life of your investment.**

- 19. Disconnect machine when not in use, before servicing and when changing accessories.**
- 20. Remove adjusting keys and wrenches from machine before turning it on.**
- 21. Don't overreach. Move around work surface if need be, keeping secure footing and balance at all times.**
- 22. When lifting machine ensure it is carried by the two butterfly handles at sides. Do not attempt to carry machine by any other means.**
- 23. Check damaged parts. Before further use of the machine, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect the machines operation. A guard or other part that is damaged should be properly repaired or replaced by an authorised service centre unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by an authorised service centre. Do not use machine if switch does not turn it on and off.**
- 24. Do not wipe parts with solvent as this may damage and crack parts. To clean machine blow down with air stream and fine cleaning brush.**
- 25. Only use authorised service facilities to repair your machine. The manufacturer will not be responsible for any damages or injuries caused by repair by unauthorised persons or by mishandling of the machine.**
- 26. Use only original Surcare replacement parts, accessories and attachments to ensure they have been tested for performance and safety.**

- 27. Do not touch movable parts or accessories unless machine has been disconnected from power source.**
- 28. Stay alert. Do not use this machine when tired. Use common sense.**
- 29. In the event of a power failure whilst using the machine turn switch to OFF position immediately. Do not walk away from machine without ensuring the machine is turned OFF. Keep machine switched OFF until power is resumed.**

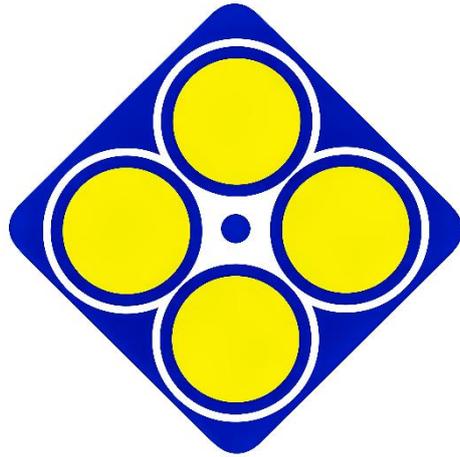

surcare

SURCARE AUSTRALIA

**36 Enterprise Avenue
Berwick VIC 3806
Australia**

Phone: +61 3 9796-1894

Website: www.surcare.com

Email: surcare@surcare.com

Made in Australia